




Dish rack cart Manual

Code No. : 22171 / 22172

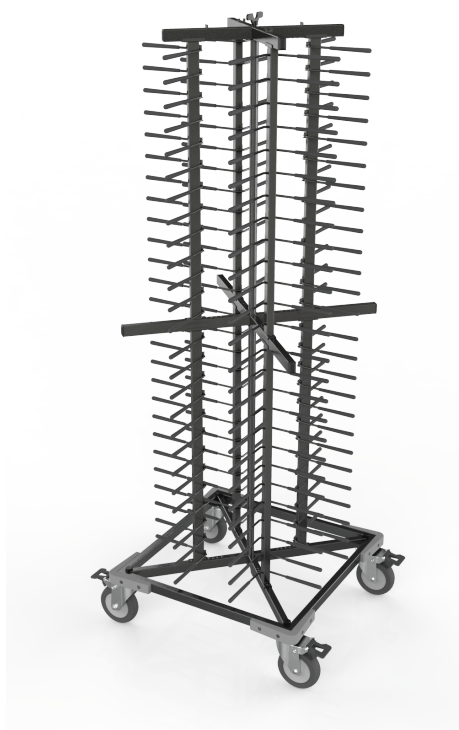


MOVENDIS®
www.movendis.co.kr


Components

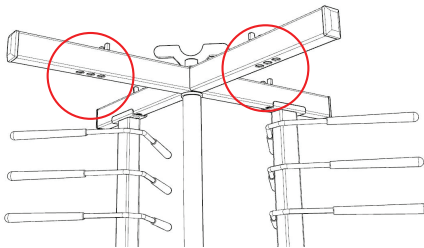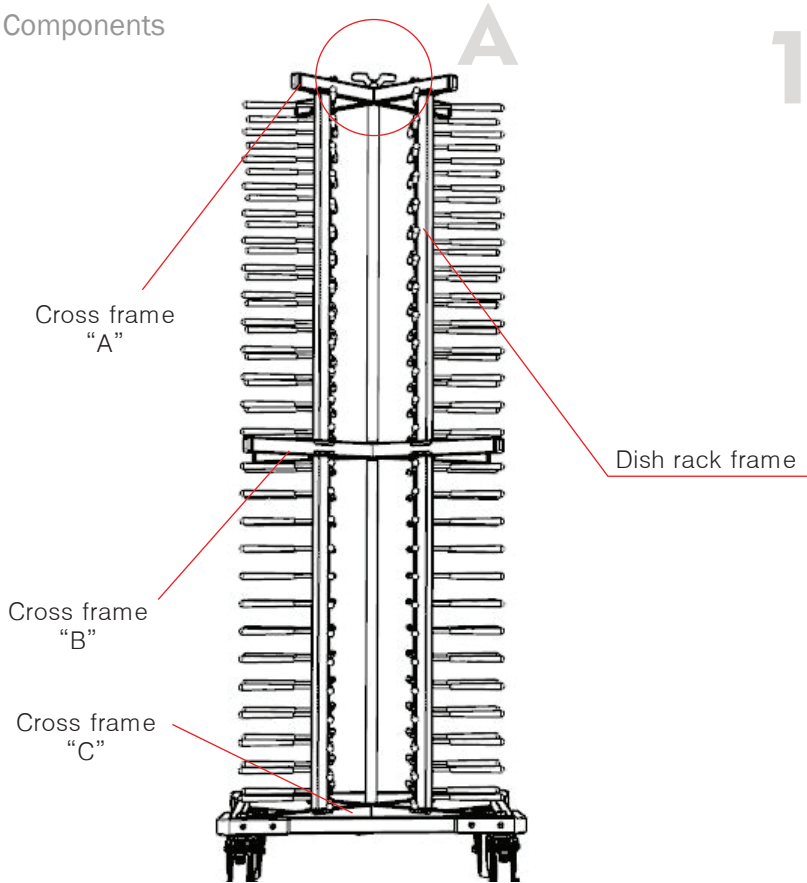


Each of cross frame A,B and C
has three drilled holes

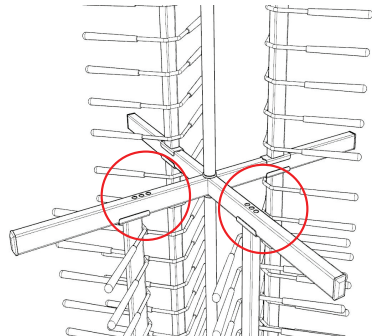

- loosen the top wing nut to allow movement of the dish rack frame

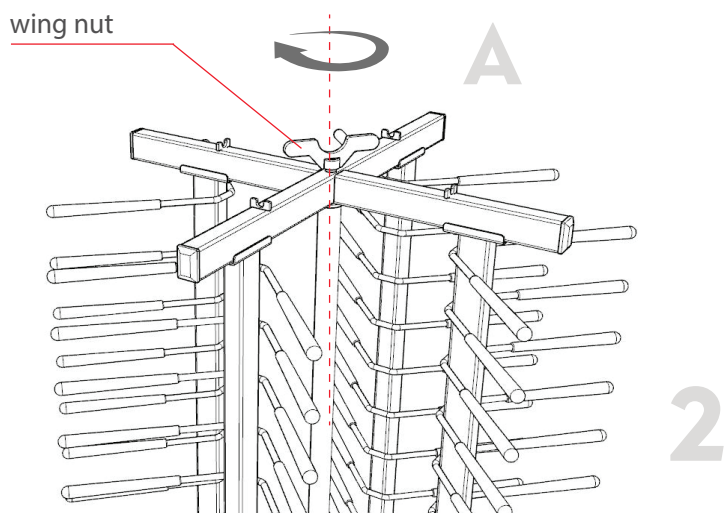


- Loosen the wing nut just enough to leave space between the cross frame and the dish rack frame to move.

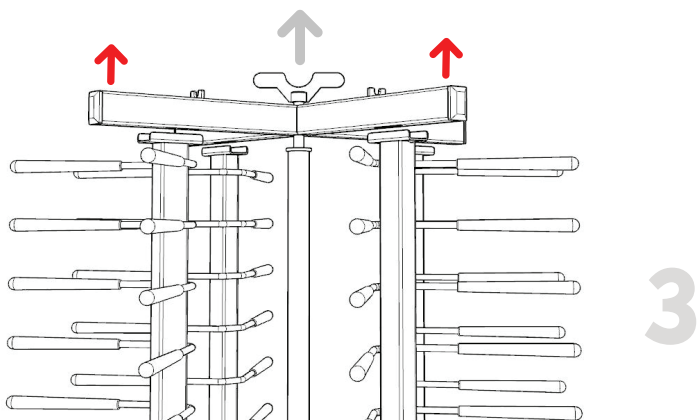


- Move to the hole in the desired location and take a position.

4

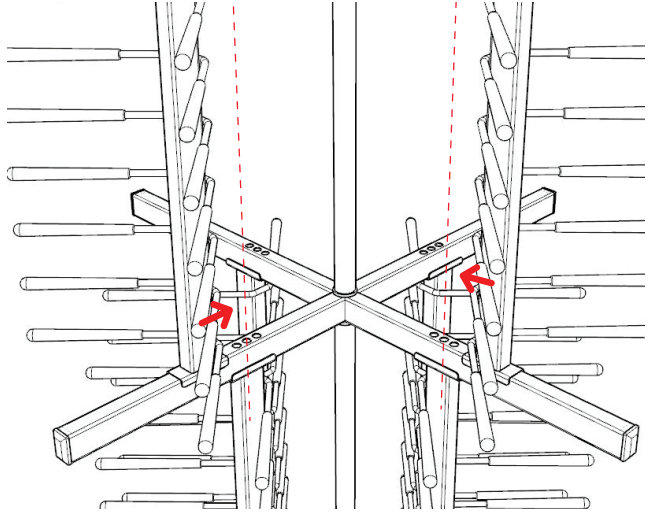


5

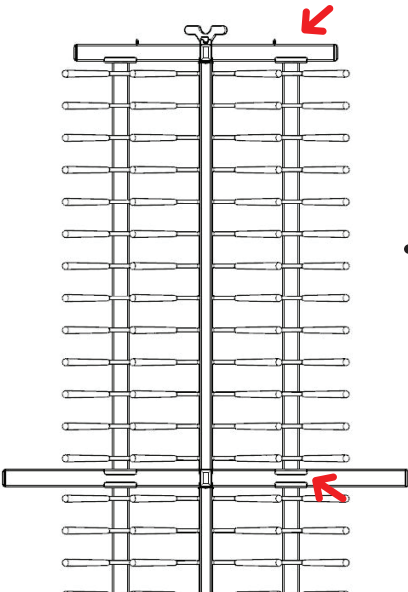


- Align the upper and lower hole positions so that the dish rack frame is vertical.

6

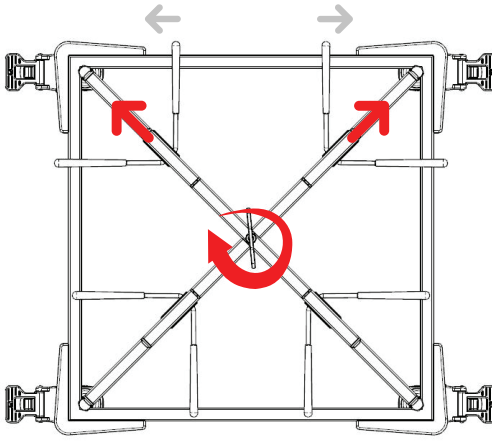

- After adjusting it to the desired position, turn the upper wing nut back to its original state to fix it.

- Depending on the location of the hole, the distance between the dish rack frames is adjusted so that various dishes can be stacked.

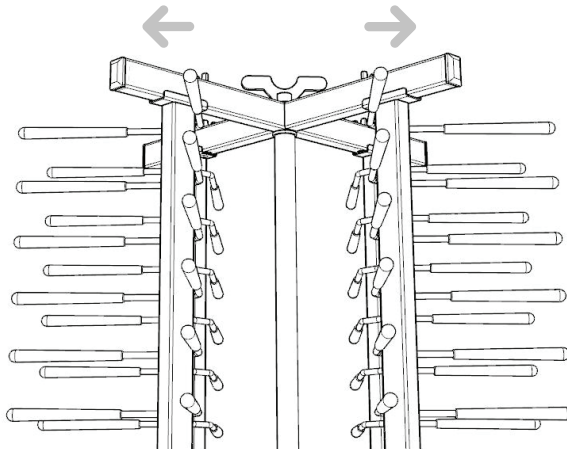

WARRANTY

1. This product has passed quality control and free from defect.
2. This product is warranted one year from the purchase.
Defect caused from mis-use or mis-handling by user cannot be covered.
3. Product out of warranty period or broken due to mis-use or mis-handling can be repaired or replaced but this service will be charged.
4. Other questions or claims can to be made to local distributor or to manufacturer directly.



Address : 15-1, Dogokan-gil, Chowol-eup, Gwangju-si,
Gyeonggi-do, KOREA, 12736

TEL : +82-31-766-5888 / Fax : +82-31-766-0451

Homepage : www.movendis.co.kr / E-mail : Info@movendis.co.kr